

Water Separator PiW 2075

1. Features

The Coalescer filter has been specially designed to separate water from hydraulic fluids.

According to VDMA standard sheet 24568, the amount of water in HE pressure fluids has to be kept below 1000 ppm (0.1 %). HLP fluids should not contain any free water at all. Free water always causes turbidity which can be seen by the human eye. Physically, turbidity is a two-phase mixture (emulsion) in which small droplets of water are present in the pressure fluid. For this reason, it is advisable to carry out a mechanical separation of these water droplets; this technique is based on the coalescer - principle. The droplets are collected in various layers and brought together into larger units. The water drops thus formed are several millimetres in diameter.

After leaving the coalescer layer, the drops come in contact with a special hydrophobic fabric, where the separation from the pressure fluid takes place. The water is removed from the circuit by means of sedimentation. It is important that a certain differential pressure is not exceeded during the process. The viscosity also needs to be taken into account to ensure proper operation. The maximum viscosity for effective water separation is approx. 68 mm²/s. The coalescer works best if the pressure fluids contain a minimal amount of emulsifying additives. The bottom line: in systems that are frequently at risk for water ingress, expensive special oils can be replaced by simple, cost-effective pressure fluids.


Characteristics:

- Mechanical separation of water droplets - coalescer principle
- Water removing by means of sedimentation
- Expensive special oils can be replaced by simple, cost-effective pressure fluids
- Worldwide distribution




2. Flow rate

 500 mm²/s
 190 mm²/s
 33 mm²/s

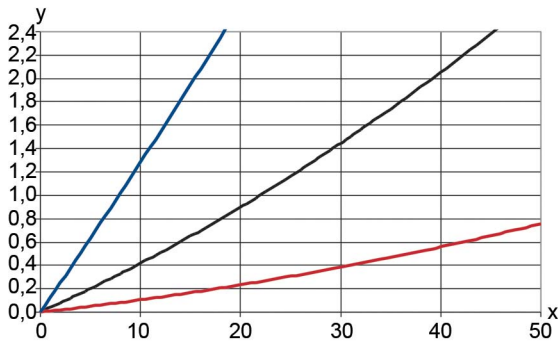

y = differential pressure in bar
 x = flow rate in l/min

3. Water solubility

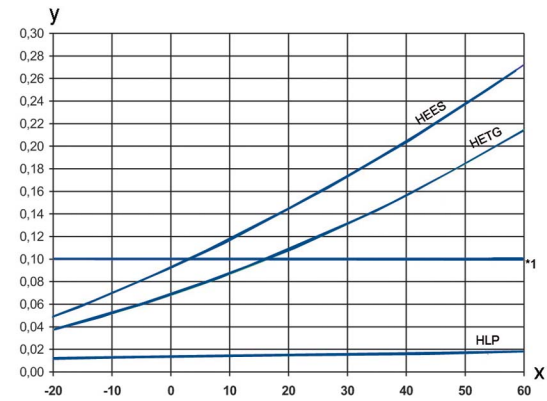


x = temperature in °C
 y = water solubility
 *1 VDMA-threshold

4. Quality assurance

MAHLE filters and filter elements are produced according to the following international standards:

Norm	Designation
DIN ISO 2941	Hydraulic fluid power filter elements; verification of collapse/burst resistance
DIN ISO 2942	Hydraulic fluid power filter elements; verification of fabrication integrity
DIN ISO 2943	Hydraulic fluid power filter elements; verification of material compatibility with fluids
DIN ISO 2923	Hydraulic fluid power filter elements; method for end load test
DIN ISO 2924	Hydraulic fluid power filter elements; verification of flow fatigue characteristics
ISO 3968	Hydraulic fluid power filters; evaluation of pressure drop versus flow characteristics
ISO 10771.1	Fatigue pressure testing of metal containing envelopes in hydraulic fluid applications
ISO 16889	Hydraulic fluid power filters; multipass method for evaluation filtration performance of a filter element

5. Symbol

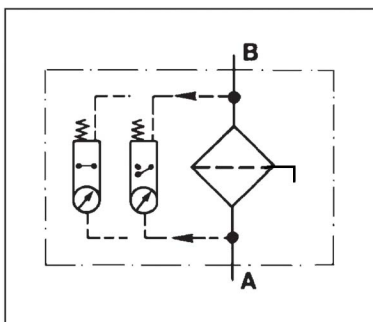

6. Order numbers

Example for ordering filters:

1. Filter housing	2. Filter element
complete with visual/electrical maintenance indicator, droplet separator and coalescer element Type: PiW 2075 Order number: 70306850	Type: KE 2629 E1 COA Order number: 76361281

7. Technical specifications

Design:	in-line filter
Nominal pressure:	6 bar (87 psi)
Test pressure:	8 bar (116 psi)
Temperature range:	-10 °C to +80 °C (other temperature ranges on request)
Filter housing material:	Alu
Sealing material:	NBR/Cu
Water collection chamber:	approx. 2 l
Maintenance indicator setting:	Δp 1.2 bar $\pm$ 0.2 bar
Electrical data of maintenance indicator:	
Max. voltage:	250 V AC/200 V DC
Max. current:	1 A
Contact load:	70 W
Type of protection:	IP 65 in inserted and secured status
Contact:	normally open/closed
Cable sleeve:	M20x1.5


The switching function can be changed by turning the electric upper part by 180° (normally closed contact or normally open contact). The state on delivery is a normally closed contact. By inductivity in the direct current circuit the use of suitable protection circuit should be considered. Further maintenance indicator details and designs are available in the maintenance indicator data sheet.

We draw attention to the fact that all values indicated are average values and do not always occur in specific cases of application. Our products are continually being further developed. Values, dimensions and weights can change as a result of this. Our specialized department will be pleased to offer you advice.

We recommend you to contact us concerning applications of our filters in areas governed by the EU Directive 94/9 EC (ATEX 95). The standard version can be used for liquids based on mineral oil (corresponding to the fluids in Group 2 of Directive 97/23 EC Article 9). If you consider to use other fluids please contact us for additional support.


Subject to technical alteration without prior notice.

8. Dimensions

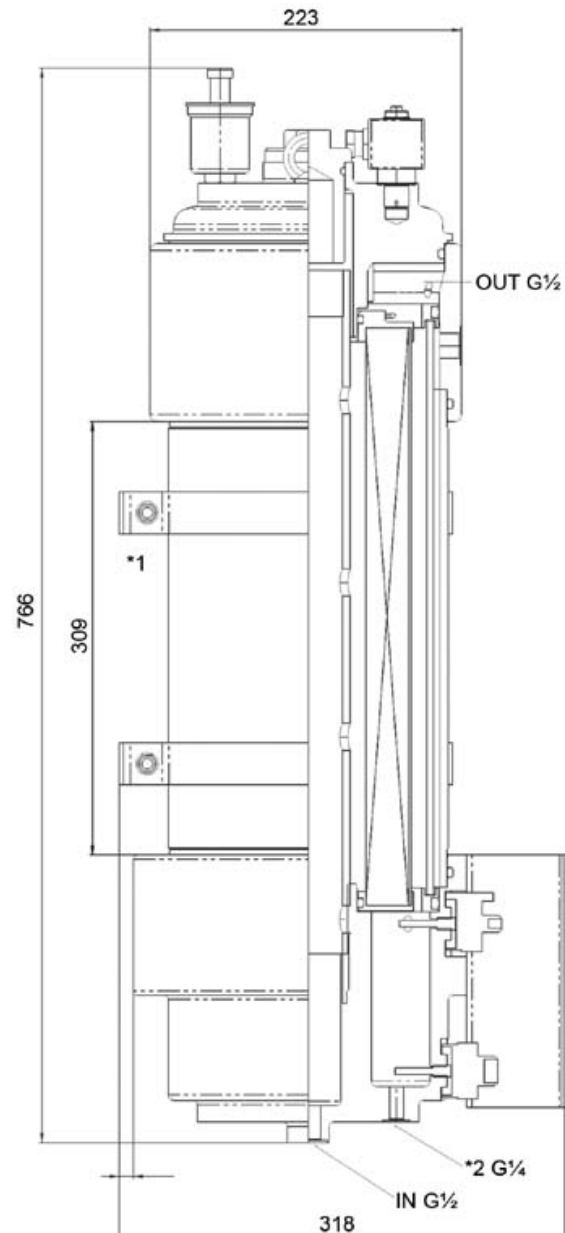

*1 holder adjustable

*2 water drain screw G $\frac{1}{4}$

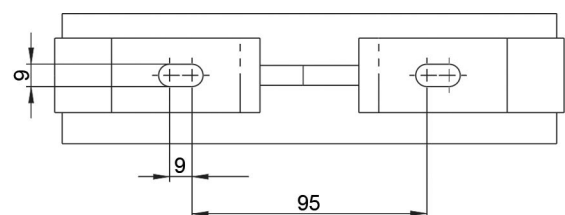

holder dimensions

9. Installation, operating and maintenance instructions

9.1 Filter installation

When installing the filter make sure that sufficient space is available to remove filter element and filter housing.

Install filter vertical so that the separated water can flow down and can be discharged.

9.2 Connecting the electrical maintenance indicator

The electrical indicator is connected via a 2-pole appliance plug according to DIN EN 175301-803 with poles marked 1 and 2. The electrical section can be inverted to change from normally open position to normally closed position or vice versa.

9.3 Operating instruction

The max. viscosity for an effective water separation should not exceed 68 mm²/s. The coalescer should run with a differential pressure of approx. 0.3 bar, that means that the volumetric flow is determined by the viscosity of the oil. The separated water will be collected in the PiW 2075 (max. 2 l). The Water can be discharged automatically by using the water level sensor KW 9/1. In order to recognize the separated water, a transparent water-detection device with a tap or so called warning indicator should be mounted.

Remark: Please note permissible operating pressure of the housing.

9.4 When should the coalescer element be replaced?


A differential pressure indicator with a switching level of Δp 1.2 bar is mounted at the top of the filter housing. During cold starts, the indicator may give a warning signal. Press the red button of the visual indicator once again only after operating temperature has been reached. If the red button immediately pops up again and/or the electrical signal has not switched off after reaching operating temperature, the coalescer must be replaced after the end of the shift.

As already mentioned above, the filter should run at Δp of approx. 0.3 bar. The flow rate/pressure drop curves show the flow rates according to the viscosity. If the indicator may give a warning signal, the coalescer element have to be changed.

9.5 Element replacement

Stop system and relieve filter from pressure. Use the water tap to empty the housing. Unscrew the cover and change the coalescer element. Check seals in the lid-cover for possible damages, replace if necessary. Place the top cover back on top of the housing and tighten it. Close the water tap.

The venting will start automatically at the 10 bar version by the air release valve (the black protecting cap have to be opened 2 turn).

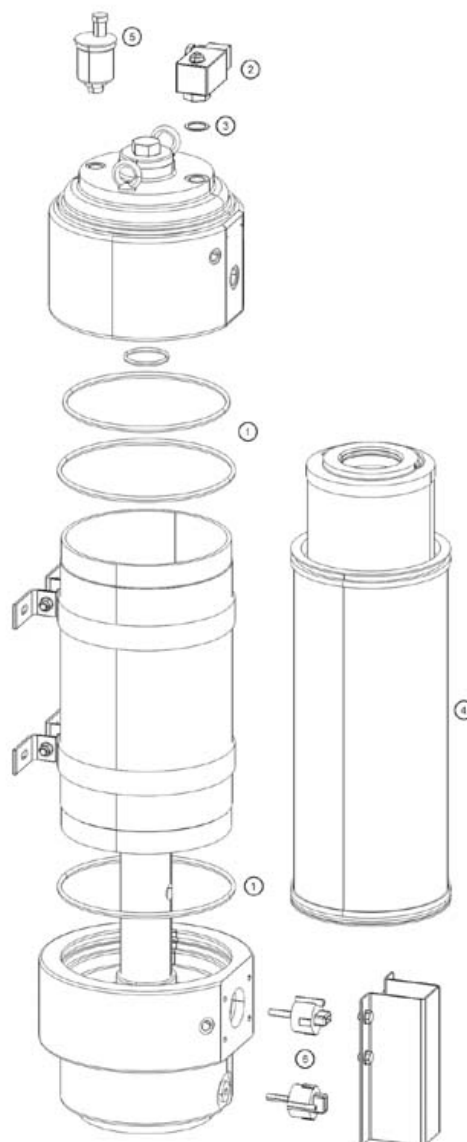

10. Spare parts list

Order numbers of spare parts		
Position	Type	Order number
①	Seal kit for filter housing	
	NBR	70365435
②	Maintenance indicator	
	Visual PiS 3111/1,2	77669971
	Electrical PiS 3114/1,2	79764028
	Electrical upper section only	79764036
③	Seal kit for maintenance indicator	
	NBR	77760309
④	Droplet separator	70318050
⑤	Air-release valve	79352519
⑥	Water level sensor KW 9/1	76607030

MAHLE Filtersysteme GmbH
 Industriefiltration
 Schleibachweg 45
 D-74613 Öhringen
 Phone +49 (0) 7941/67-0
 Fax +49 (0) 7941/67-23429
 industriefiltration@mahle.com
 www.mahle-industriefiltration.com
 70365135.09/2008